


For the version without covering,  
please contact:  
[sales@alorair.com](mailto:sales@alorair.com)



Restoration&Moisture&Ventilation

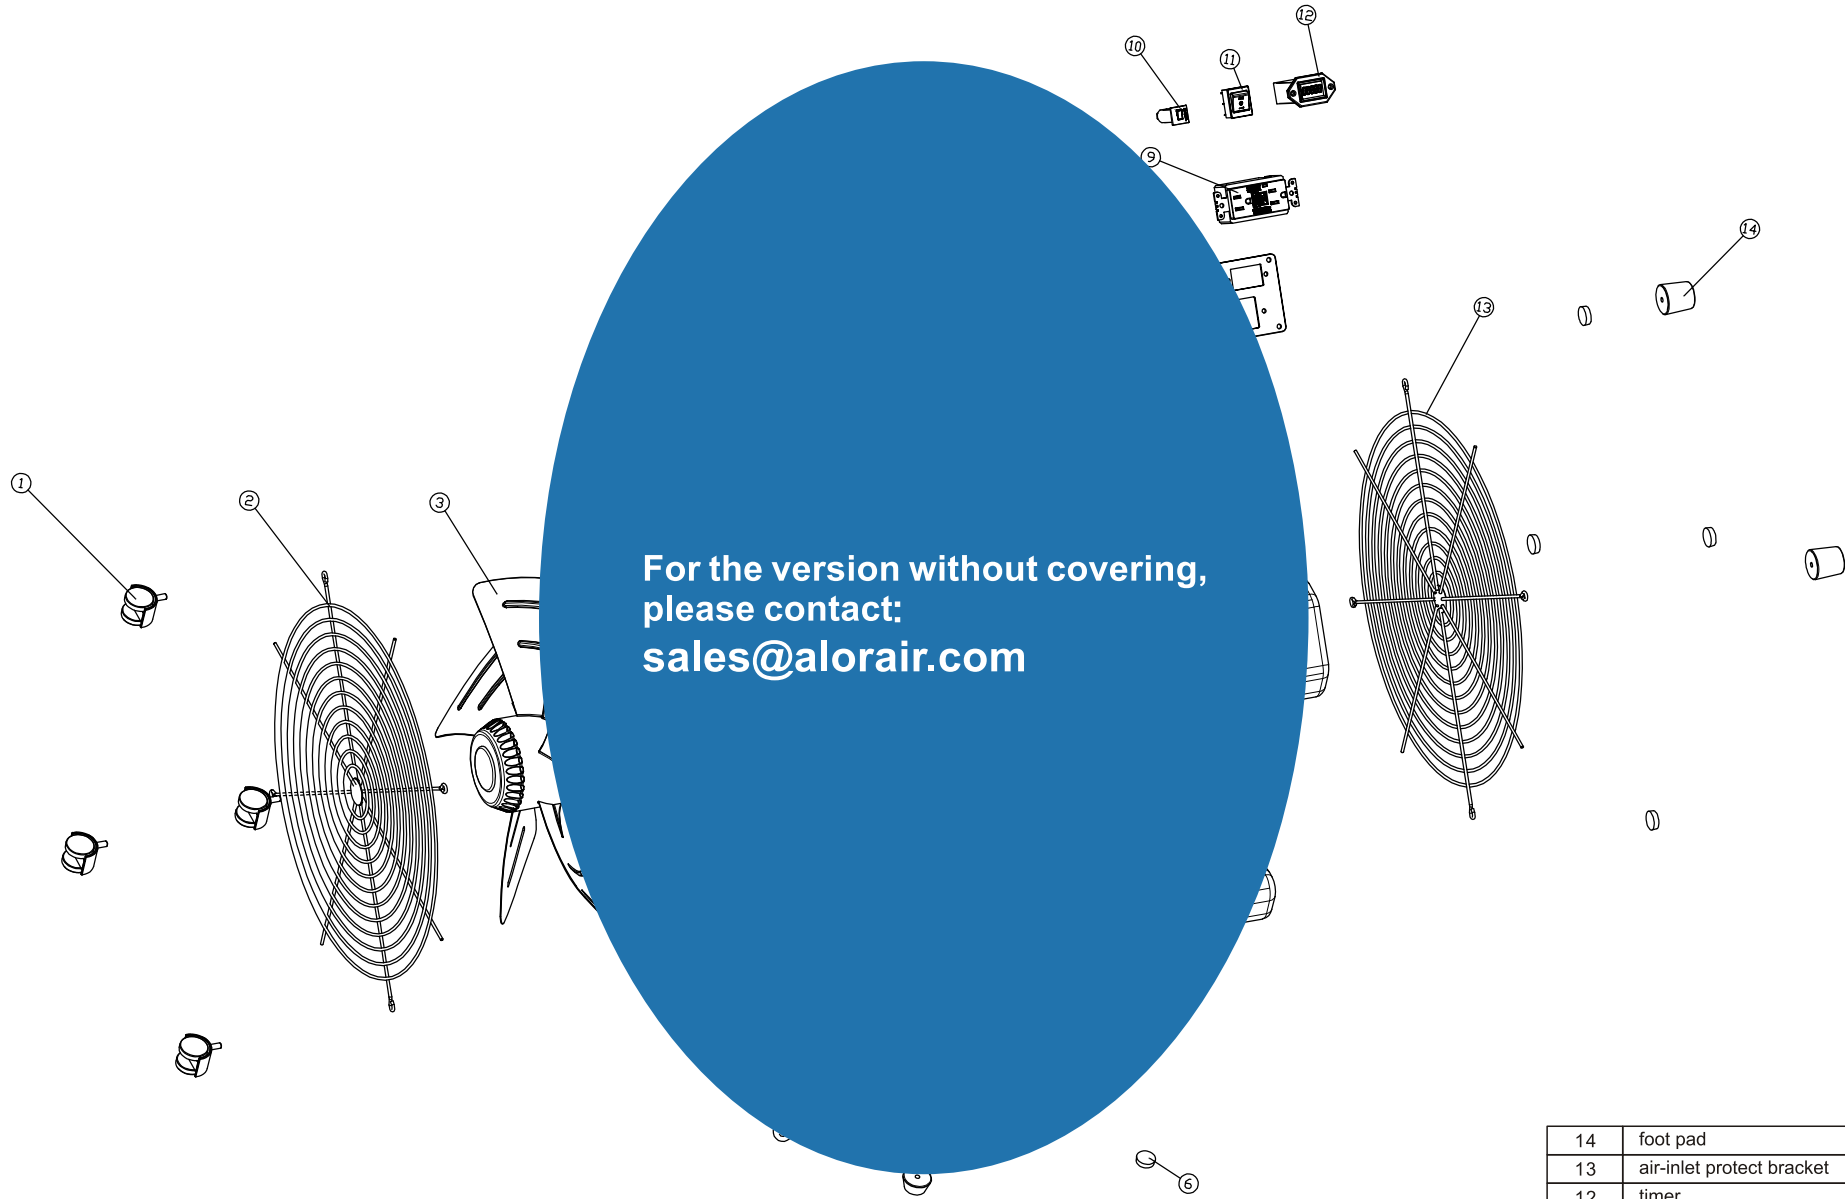

**SPARE PARTS LIST**  
**Zeus Extreme**

14	foot pad	rubber	2
13	air-inlet protect bracket	φ 3 steel wire	1
12	timer	115V 60HZ	1
11	power switch	115V 60HZ 16A	1
10	overload protector	115V 60HZ 12A	1
9	terrace socket	115V 60Hz 10A	1
8	control panel	stainless steel plate	1
7	main board	LLDPE	1
6	foot pad	rubber	6
5	rubber foot pad	rubber	2
4	motor bracket	galvanized sheet	1
3	axial motor	component	1
2	air-out protect bracket	φ 3 steel wire	1
1	universal wheel	component	4
No.	Name	Material	Quantity