

QUICK START GUIDE

AlorAir DryEasy APP



AlorAir



1. Download and install AlorAir DryEasy from the App Store or Google Play Store.
2. Log in or sign up for a new account.

1



The app is built around Work Plan. Enter the Work Plan and click “ + New Work Plan ”.

Enter the work plan information and click "add contacts" to save the work plan

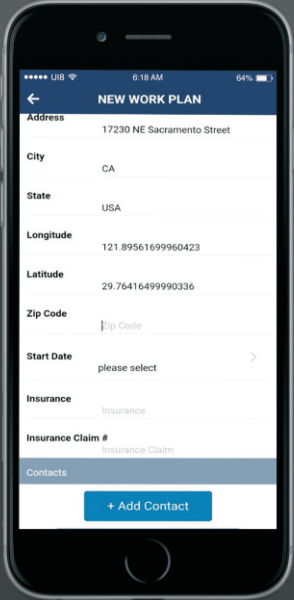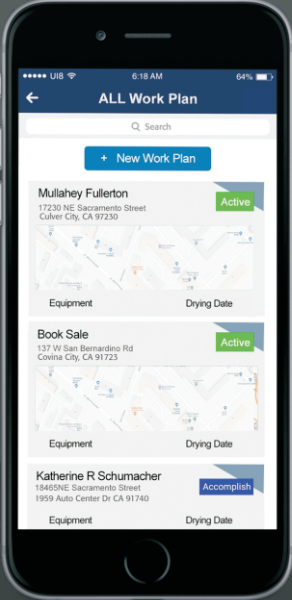

TWO CONNECTION MODES

1. WI-FI Connection (Priority use)

- Mobile phone wireless connection home router.
- Mobile phone connects to another phone's 4G cellular mobile personal hotspot.

2. Direct Connection

In the absence of any WI-FI or 4G Network, the phone directly connects to the machine (Network starts with HF).

2



Chamber List

When you have entered all of the drying chambers hit save and add the equipment to the drying chamber you will be taken to the Work Plan.






3



EQUIPMENT

Clicking on the Equipment tab will take you to a list of your company equipment . You can click on any unit to see the details.

Click on the nearby tab to try adding a new dehumidifier.

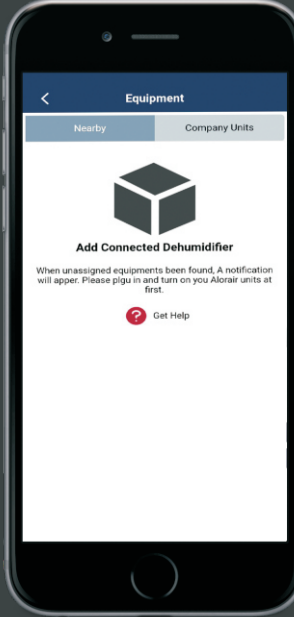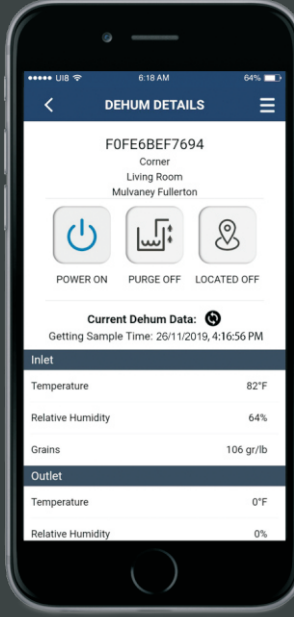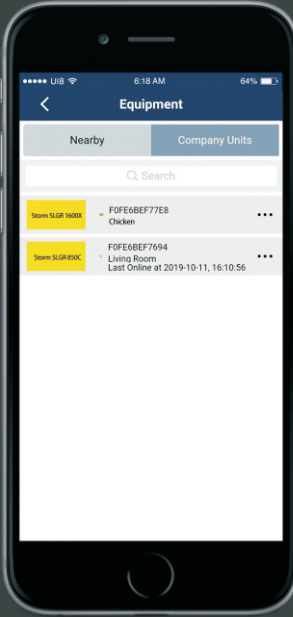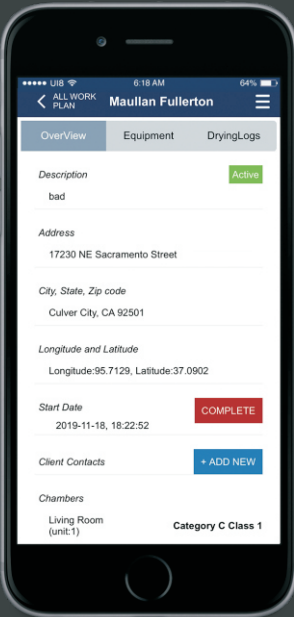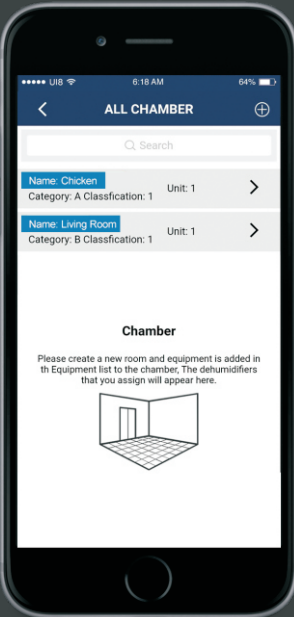



4



DRYING DATE

Select the dehumidifier under the chamber to generate a new and updated dry Log.

The drying log is where you will enter your daily readings. The outside conditions will be pulled from the nearest station. Smart dehumidifiers will send their information to the drying log.

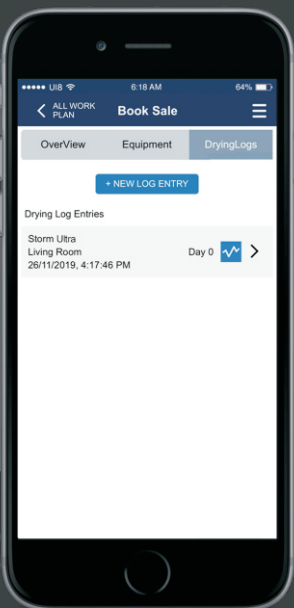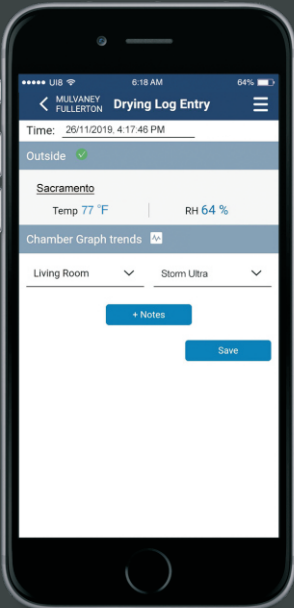




5



User account setting to handle all app related configuration issues.

Under my team, you will see a list of all current team members and try to invite new members to join, with the team creator also having the ability to dissolve and move the team.



Note: administrators can add or remove members from the team.

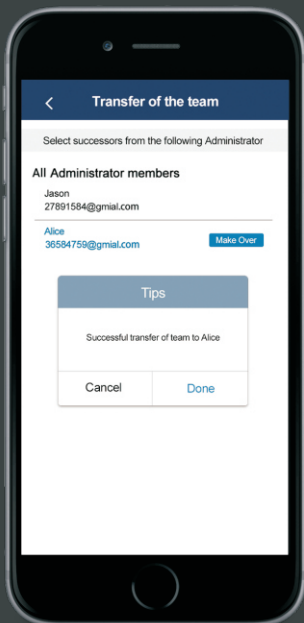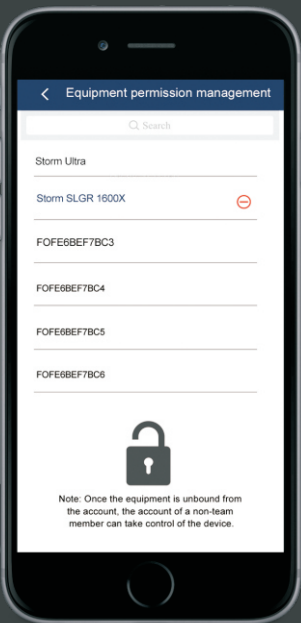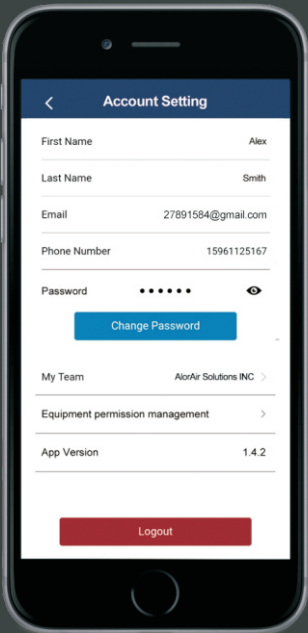

6



Use Dehumidifier status to share the current readings of all dehumidifiers within range you can use your phones default sharing apps to send this data to others.

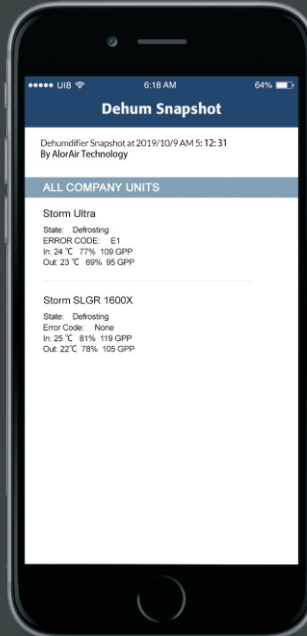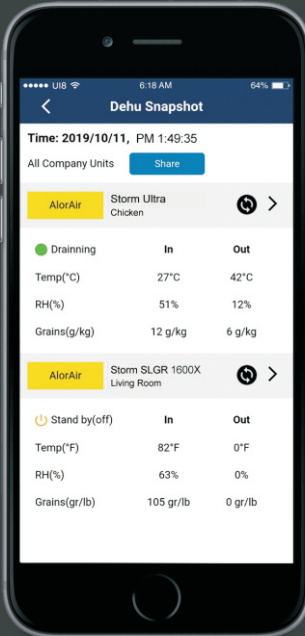

BE EVERYWHERE AT ONCE



Add: 4240 Latham Street, Suite D, Riverside, CA 92501 Tel: 1-888-990-7469